

QUICKBITE™ BY SMITH-COOPER® INTERNATIONAL

Installation Instructions


1. Cut PEX, CPVC or Copper tube square and to desired length. If possible use the proper tube cutting tools (shears for plastic tubing and rotary cutter for copper tubing). Remove all sharp edges and burrs that will prevent a proper seal.



2. Make a mark on the tubing 1" from the end going onto the QUICKBITE™ to insure you push the pipe or tubing the proper distance into the fitting.



3. Remove the support stiffener from the fitting for copper pipe or CPVC tubing by using the disconnect tool. Hold pressure against the push ring with the disconnect tool and pull support stiffener from fitting.

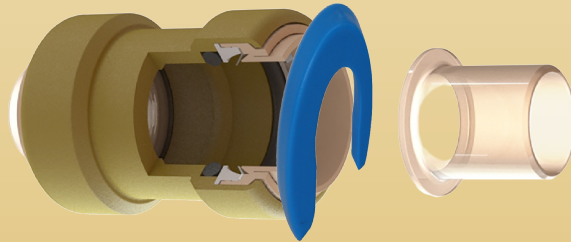

4. Push the tubing or pipe with a slight twist into the fitting until end of the tubing or pipe is resting against the pipe stop. When connecting with PEX tubing use the support stiffener as internal support for the tubing.



5. To Disconnect: Press disconnect tool firmly against fitting until push ring is depressed. While holding pressure against the push ring, pull the tubing or pipe out of the fitting.

