


Plug


P

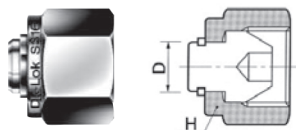

Plugs fractional un-used tube-lok port.

Part No.	Tube O.D. D		Width across flat H	
	in.	mm	in.	mm
30-P-1/16	1/16	1.59	5/16	7.93
30-P-1/8	1/8	3.17	7/16	11.11
30-P-3/16	3/16	4.76	1/2	12.70
30-P-1/4	1/4	6.35	9/16	14.28
30-P-5/16	5/16	7.93	5/8	15.87
30-P-3/8	3/8	9.52	11/16	17.46
30-P-1/2	1/2	12.70	7/8	22.22
30-P-5/8	5/8	15.87	1	25.40
30-P-3/4	3/4	19.05	1-1/8	28.58
30-P-7/8	7/8	22.22	1-1/4	31.75
30-P-1	1	25.40	1-1/2	38.10
30-P-1-1/4	1-1/4	31.75	1-7/8	47.63
30-P-1-1/2	1-1/2	38.10	2-1/4	57.15
30-P-2	2	50.80	3	76.20

Installation Instructions

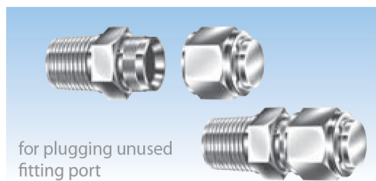

Plug is for plugging un-used tube lok port.

1. Remove the nut and ferrules for the Lok fitting body.
2. Finger-tighten the plug.
3. Tighten the plug 1/4 turn beyond the finger-tight position, keeping the fitting body steady with a backup wrench.
4. Do not tighten 1-1/4 turns as this has a machined ferrule - not the standard ferrules.
5. Tighten 1/8 turn for 1/16, 1/8 and 3/16"